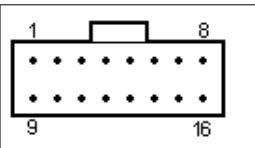


## PIONEER DEH-2800MP pinouts

 <p>The diagram shows a 16-pin connector with two rows of eight pins. Pin 1 is at the top left, pin 8 at the top right, pin 9 at the bottom left, and pin 16 at the bottom right. A bridge connects pins 1 and 8. The pins are numbered 1 through 16 in order from top-left to bottom-right.</p>	<p>1 black — GND 2 — not connected 3 blue-white — ant. control 4 — not connected</p>	<p>5 — Speaker LF- 6 — Speaker LF+ 7 — Speaker RF- 8 — Speaker RF+</p>	<p>9 yellow — BAT+ 10 red — ignition +12V 11 — not connected 12 — not connected</p>	<p>13 — Speaker LR- 14 — Speaker LR+ 15 — Speaker RR- 16 — Speaker RR+</p>
---	--	--	---	--